


# Cheak Frunk Insert

*Please follow the instructions found on the kit.*

For best results we recommend you cut the left and right side kidneys off the sheet before application. In addition, separate the 2 racing stripes so you have left and right side dual racing stripes. Use the provided gap tape to make a vertical straight line from top to bottom on the frunk along the raised ridge. This will provide your straight edge when installing the center dual racing stripes. Install one of the dual racing stripes at a time. Be sure to keep your gap between the stripe and gap tape even as you apply the dual racing stripes. This will ensure nice straight stripes when your installation is complete.

*Before install separate pieces*

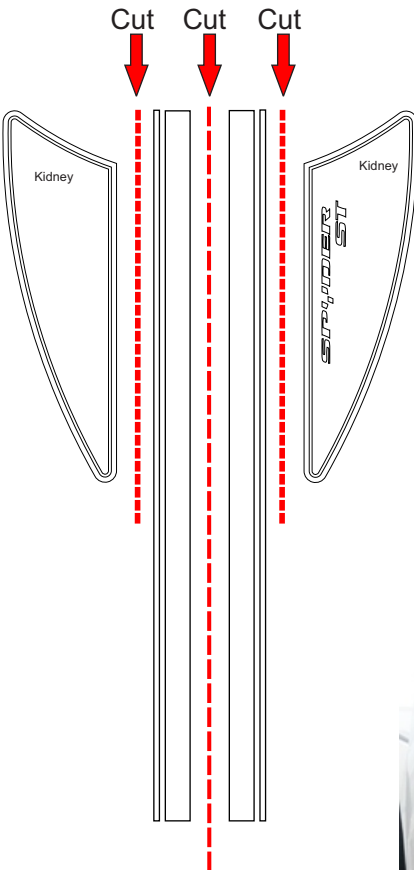

Use supplied 1/4" Gap tape to help align the vertical stripes straight and evenly as you apply the stripes.

Apply center gap tape 1/4" over the center ridge of the frunk before you install each side of the dual racing stripes.

Once center racing stripes have been installed then apply the outer kidney stripes.



***Completed install should look like this.***